



AFTER THE APPLICATION

Normally you can walk on the surface within 24-48 hours. Full move-in after 48 hours.

Rubio Monocoat utilizes an oxidative drying and curing process; therefore dry time is dependant on air movement, temperature and humidity.

Oil Plus will normally cure within 21 days; keep dry during the curing period. Any liquid exposure should be wiped dry immediately.

Oil Plus 2C will normally cure within 7 days; keep dry for 7 days. Any liquid exposure should be wiped dry immediately.

Covering in order to protect the floor is only allowed after 48 hours with a breathable material. The floor should not be completely sealed. After this covering is removed the finish will start curing again so allow for full curing prior to introduction of liquids.

After the curing period the finish can be maintained with water and Rubio Monocoat Natural Soap. **DO NOT USE OTHER CLEANERS.**

It is possible that after drying a light haze is produced in which light footprints are visible. These will disappear as soon as the floor is cleaned with Rubio Monocoat Natural Soap.

Attention:

Rags or any other items saturated with Monocoat can combust. After using, soak in water 24 hours before disposal.

Please visit our website at
RubioMonocoatUSA.com

Phone: 805.384.9200

Fax: 805.435.0305

E-mail: info@rubiomonocoatusa.com



APPLICATION INSTRUCTIONS

Oil Plus Oil Plus 2C



Application Instructions

PREPARATION

Sanding:

Sanding and floor preparation should be carried out in accordance with industry accepted methods. For a good end result, preparation is critical. The surface has to be evenly sanded and screened particularly when you apply the colors. Uneven sanding can result in uneven color. We recommend a final sanding with 80-120 grit paper followed by an 80-120 screen depending on the texture and color you are trying to achieve.

Dust Removal:

Dust has to be removed very thoroughly! This new technology enables the oil to make a molecular connection within 15 seconds with the wood fibers by means of a melding together. If dust is present, the oil will condense with the dust, which will create a microscopic paste upon the planks. The oil will be connected with the dust instead of the wood fibers.

Two methods to remove the dust:

1. Lightly dampen a cloth with the Rubio Monocoat Raw Wood Cleaner and wipe the floor clean. The cleaner will electrostatically absorb the dust. Be certain the floor is dry before application of finish. Exotic Species must be cleaned with Raw Wood Cleaner prior to application of Rubio Monocoat
2. Vacuum clean very thoroughly and wipe with a microfiber cloth. In order to make sure that the dust is well removed, it is recommended to do a test with the Raw Wood Cleaner after vacuum cleaning. When there is still dust to be found on the dampened cloth, the dust isn't sufficiently removed.

Product Preparation:

Oil Plus needs to be stirred well (not merely

shaken) so that there are no color pigments left at the bottom of the can. Oil Plus 2C; Part A and Part B must be thoroughly combined.

APPLICATION

1. Apply to wood.
2. Allow reaction of 3 minutes minimum.
3. Remove all excess within 10-15 minutes.
4. Work in manageable areas; 50—150 SF.




Apply the oil to the perimeter with cloth. (Figure 1)



Apply stripes lengthwise with a cloth, squirt, or spray bottle to the center of the planks. (Figure 2)



Spread the applied oil equally with a white pad. Red pad works well also. (Figure 3)

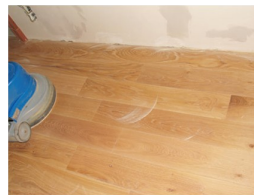

Keep spreading the oil until the pad no longer forms color rings. (Figure 4)



Move the surplus product to adjacent planks. (Figure 5)

Allow 3 minute minimum reaction time between the application of oil and removal of excess.

Have all excess oil removed within 15 minutes (10 minutes or less on a hot/dry day).

Remove the excess from the sides and V-groves with cloth (Figures 6 & 7 below). For this operation, you can walk on the treated surface without a problem.



Use a 2nd pad to remove all excess oil and rub area very dry. (Figure 8) (Additional pads if necessary)

Oil which has not reacted needs to be rubbed off completely by no more than 15 minutes after application. This means ALL of the excess. The color can't be darkened by leaving excess oil on for longer. You can never rub off too much oil; however, you can rub off too little.

Figure 9 shows the two white pads that were used for



the application and removal. The same two pads can be used for the same purpose on the next area. (Figure 9)



Repeat the application on each area until the floor is complete. It is recommended to rub the area once again with a new white pad. You can never rub off too much oil.